

---

# **USER MANUAL**

---

**RACK MOUNT READY SERIES  
(9.7inches Dual Monitor)**

<TABLE OF CONTENTS>

1	SAFETY INSTRUCTION	3
2	FCC RF INTERFERENCE STATEMENT	7
3	INSTALLATION	8
4	OSD MENU SETTING	11
5	FEATURE	17
6	TROUBLESHOOTING	19

## 1. SAFETY INSTRUCTION

- Follow this safety instruction to use the monitor properly and prevent the damage.

\* This safety instruction has "Warning" & "Caution" as below



Warning - If the user does not follow this instruction,  
it may cause the serious damage to the user.



 
Caution - If the user does not follow this instruction, it may cause the slight  
damage to the user or cause some damages to the monitor.

- Keep this user's guide book for later use.



### Warning

Never remove the back cover and touch the inside of the monitor.  
If you need a service, please contact the service center.

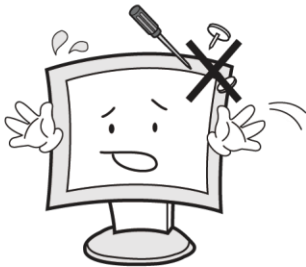


Keep away the monitor from the direct sunlight and a heating appliance.



Never put objects of any kind into this product as they may result in a risk of fire or electric shock.



 Connect the power cord to the wall outlet tightly. If the power cord or plug are defective and the wall outlet is not tight, please do not use them.

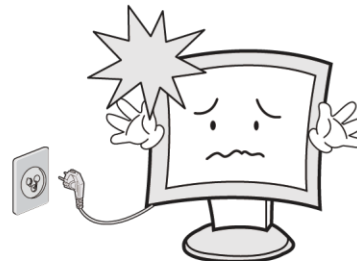




## Warning


Do not install this monitor on the outside and near water. It may cause damage to the product, electric shock and fire.



 
For cleaning do not use liquid cleaners. Never touch the power plug with wet hands.

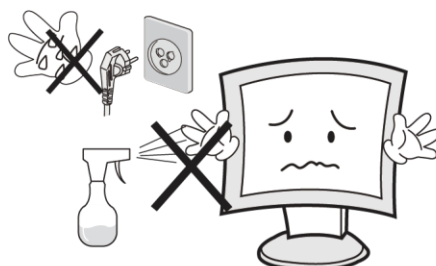

 
When lightning and thundering, unplug the monitor from the wall outlet and never touch it.

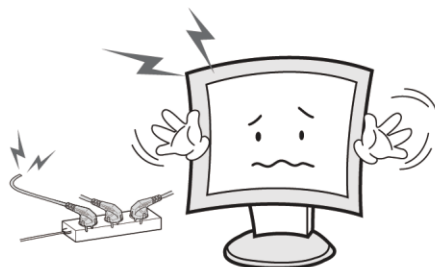

 Unplug this product from the wall outlet, when it does not operate for a long time.

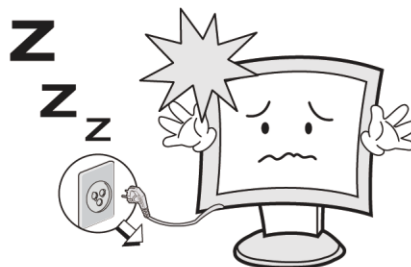

 When smoking and noising from the monitor, unplug the product from the wall outlet and contact a service center.

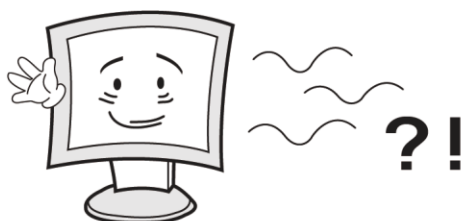

## WARNING : How to fix

Do not open this product as it contains high voltage inside.

It may create an electric shock.

If the user disassembles and remove the back cover, it does not make sure to make up for the damage and do a service and exchange the monitor.



## Cautions

Install this monitor some distance from the wall and do not install unless proper ventilation is provided.



Place this product on a stable place. If not, it may fall, causing serious damages to the monitor and people.



The openings must not be blocked by curtain, rug or other similar surface.



When carrying this monitor, be careful not to damage the panel and drop it. It may cause some trouble.

 


Before carrying the monitor, turn it off and unplug the signal cables and the power cord from the wall outlet.



Take the power plug out from the wall outlet.


Do not pull the cable. It may snap the inner-wires and cause overheating and fire.

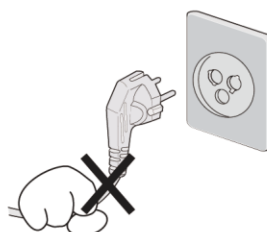



## Cautions

 
Install this monitor about 50cm far from the eyes and an angle of 0~15 degrees below eyes. Too close installation may cause having weak sight.

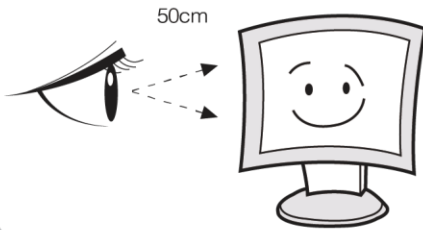

Do not press the LCD panel with hands or the sharpened material hardly.



 For cleaning, unplug the monitor from the wall outlet. Do not use the liquid cloth. Use the soft cloth.

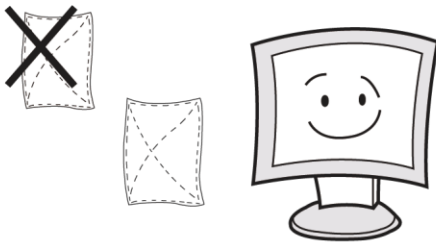

Do not use the chemical liquid for cleaning. It may cause fading and breakage.



**WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR WATER.**

### Instructions for Disposal of Electrical and Electronic Equipment in Private Households



Disposal of used Electrical and Electronic Equipment  
(Applicable in the European Union and other European countries with garbage separate disposal and collection methods)

This symbol on the product, or in the related documents in the package, indicates that this product shall not be treated as normal household waste. Instead, it should be taken to a proper applicable collection point or depot for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent possible negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city authority, your household waste disposal service or the place where you purchased the product.

## 2. FCC RF INTERFERENCE STATEMENT

### NOTE

*This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.*

*These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.*

*If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.
- Only shielded interface cable should be used.

 
*Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.*

### DOC COMPLIANCE NOTICE


This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the radio interference regulation of Canadian Department of communications.

3. INSTALLATION


*PARTS*

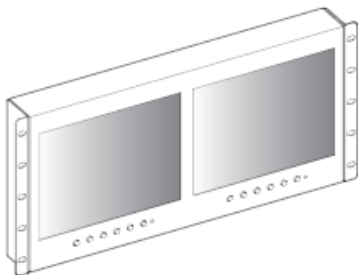


LCD Monitor

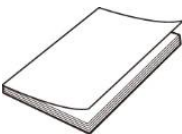 

User Manual

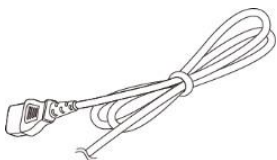 

Power Cable

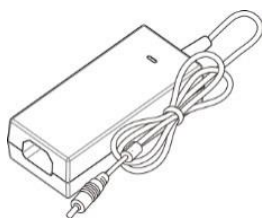 


Adapter



HOW TO INSTALL

 1) KEY BUTTON

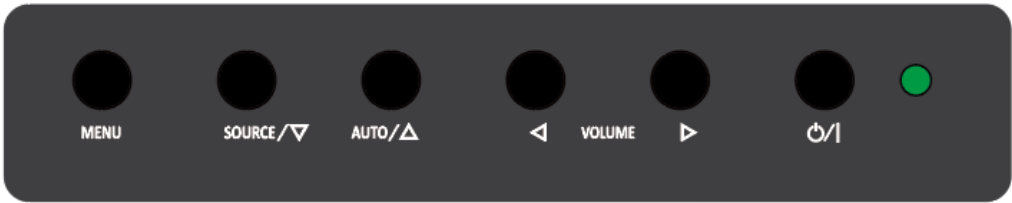


SHORT KEY FUNCTION


OSD Key	Function
MENU	Activate the menu function / Exit from the menu
SOURCE / ▼	Input source menu / Source selection(move down from OSD menu)
AUTO / ▲	Auto-fit screen with PC-RGB input / move up from OSD menu
◀(VOL)	Decrease the level of volume and move the previous menu
(VOL)▶	Increase the level of volume and select the OSD menu
⏻/	Power On / Off
LED	Red : Power Off state Green : Power On and available input signal state Orange : When DPMS "ON" state, no input signal
▲ + ◀	Press "▲ , ◀" Key 10 seconds simultaneously to lock / unlock OSD Key

2) CONNECTION

 RIGHT SIDE

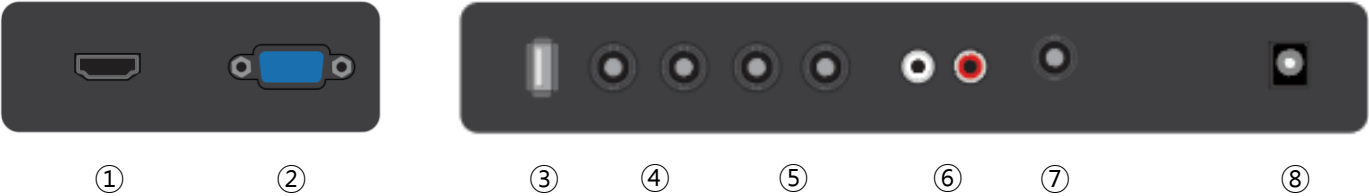

LEFT SIDE

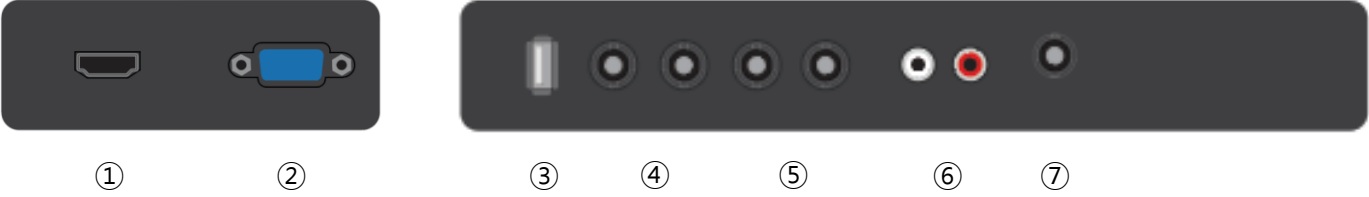 



①	HDMI	HDMI signal input
②	VGA	VGA(PC RGB) signal input
③	For FW Update	
④	VIDEO-1 IN/OUT	VIDEO-1 signal input/output
⑤	VIDEO-2 IN/OUT	VIDEO-2 signal input/output
⑥	AUDIO(VIDEO)	Stereo audio input for VIDEO
⑦	AUDIO(PC)	Stereo audio input for VGA
⑧	DC 12V	DC adapter input

4. OSD MENU SETTING

 
MENU STRUCTURE

When user presses the menu key, the first "PICTURE" menu is displayed. Select by "◀" key then two types of menu functions are shown as below.

-  PICTURE : Menu related to PICTURE Function
-  OPTION : Other OSD Menu Status Control and Firmware Update

If press "▲, ▼" key, then select sub title in functions.

PICTURE MENU

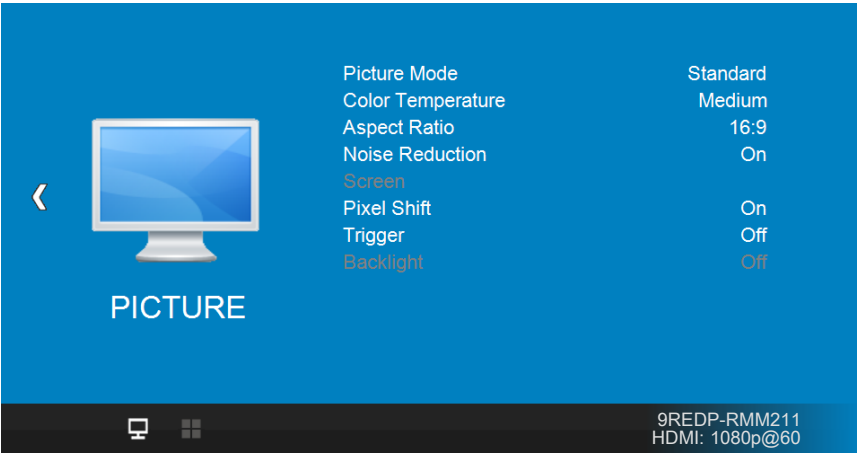

The PICTURE Menu can be selected from the following 7 modes by pressing the ▲ or ▼ key.

Picture Mode	Adjust setting of the picture
Color Temperature	Change color according to the color temperature
Aspect Ratio	Change the aspect ratio
Noise Reduction	Adjust noise attenuation of input signal
Screen	Adjust the PC-RGB input signal to fit the screen
Trigger	Select Trigger input
Pixel shift	Select auto pixel shift

1) Picture Mode

Picture Mode can select 4 modes as Standard, Soft, User and Vivid as shown in the figure below. Press the "◀, ▶" key to change the mode.

Picture Mode    Standard	Picture Mode    Soft	Picture Mode    User	Picture Mode    Vivid
Contrast 50	Contrast 30	Contrast 50	Contrast 70
Brightness 50	Brightness 45	Brightness 50	Brightness 60
Color 50	Color 60	Color 50	Color 50
Sharpness 50	Sharpness 80	Sharpness 50	Sharpness 60
Tint 50	Tint 50	Tint 50	Tint 60
⏏ MENU	⏏ MENU	⏏ MENU	⏏ MENU

Three of the four modes except for User mode are shipped with fixed values at the time of shipment from the factory.

User mode can be set with "◀, ▶" keys by selecting each item below with "▲, ▼" key only in the User mode.

Contrast	Adjust difference in the color and brightness
Brightness	Adjust the dark and light
Color	Adjust for desired color intensity
Sharpness	Adjust for best clarity of outline detail
Tint	Adjust for natural flesh tones

2) Color Temperature


Color Temperature can select 4 modes as Medium, Warm, User and Cool as shown in the figure below.

Color Temp.    Medium	Color Temp.    Warm	Color Temp.    User	Color Temp.    Cool
Red 57	Red 59	Red 50	Red 59
Green 38	Green 36	Green 50	Green 50
Blue 3	Blue 100	Blue 50	Blue 24
⏏ MENU	⏏ MENU	⏏ MENU	⏏ MENU

Three modes except User mode are factory shipped with factory default values, and each color item (RED, GREEN, BLUE) is selected with the "▲, ▼" keys in the User mode only. User settings are available.


3) Aspect Ratio

 Aspect Ratio allows user to select the each aspect ratio as shown in the figure below.  
(However, activated list is according to the input port and the input resolution.)

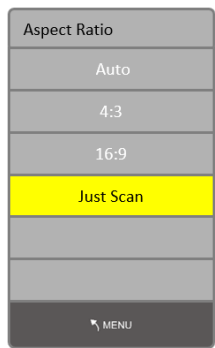


4) Noise Reduction

 Noise Reduction can select 5 modes as Off, Low, Middle, High, Default as shown in the figure below.

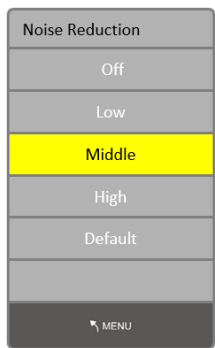

5) Screen

 Screen enables to set the active area of the display when using PC-RGB input port.

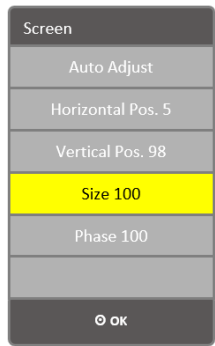


Auto Adjust is an item to be set automatically, and the input signal should be operated in the signal state where the Outline has a lot of white color.

6) Pixel shift

Select auto pixel shift (On, Off)

 OPTION MENU

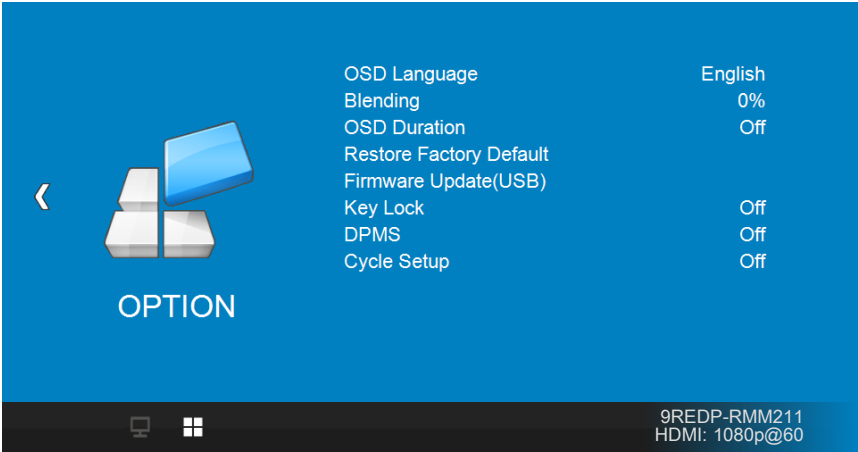

The Option Menu can be selected from the following 8 modes by pressing the ▲ or ▼ key.

OSD Language	Selectable OSD Menu Language
Blending	Adjust blending for OSD Menu and Main window
OSD Duration	Setting Duration time of OSD Menu
Restore Factory Default	
Software Update(USB)	
Key Lock	Locking the button(prevent operation)
DPMS	When input signal is the no signal, DPMS "on" change the power saving mode.
Cycle setup	Select auto input source

1) OSD Language

As shown in the figure below, OSD Language can be selected by "▲, ▼" key.



2) Blending

OSD Menu Blending can select 4 modes as Off, Low, Middle, High by pressing the "► SELECT" key.

3) OSD Duration

OSD menu Duration can select 4 modes as 5, 10, 15Sec and Off by pressing the "► SELECT" key.

 
4) Restore Factory Default

Restore factory default can be selected by pressing the "► SELECT" key. Select Yes or No by the "◀, ▶" key.



5) Software Update(USB)

Software update default can be selected by pressing the "Menu" key. Select Yes or No by the "◀, ▶" key.

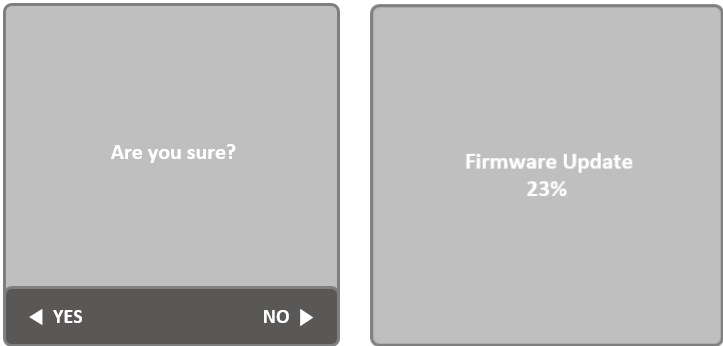

6) Key Lock

Key lock default can be selected by pressing the "▶ SELECT" key.



7) DPMS

The function can be activated(ON) or deactivated(OFF) with the button ▶.

8) Cycle setup

Select auto pixel shift with the button ▶.

INPUT SOURCE

Input Source can be selected from the following four input modes by using the ▲ and ▼ keys when the window as shown below is displayed by pressing the "SOURCE / ▼" key in the Main window.

(Input Source can be selected by ▲ and ▼ key when window shown as below. To be in this menu, pressing the "ENTER" / ▶" key in the Main window.)



AUDIO VOLUME

Audio Volume can be increased or decreased by pressing "VOL- / ◀", "VOL + / ▶" Key.





5. FEATURE

		9 Inches Dual
Display	Screen Size	9.7 inches
	Resolution	1024*768
	Pixel Pitch	0.192*0.192 mm
	Brightness	300 cd/m²
	Contrast Ratio	500:1
	Aspect Ratio	4:3
	Viewing Angle (H/V)	80° / 70° / 80° / 80°
	Display Color	262 k
	Response Time	< 20 msec
	Video System	NTSC/PAL
	Panel Life Time (hours)	20,000 hours
Interface Each screen	Video In/Out (BNC Type)	2/2
	Audio In(RCA Type)	1
	VGA In (15Pin D-Sub)	1
	PC Stereo In	1
	HDMI In	1
Special Features	Built in Speakers	Y (1W*2) each screen
	Remote Control	N
	Filter Type	3D Comb filter
	De-interlacing	Y
	Trigger Source Switching	Y
	Noise reduction	Y
	Auto source sequencing	Y
	Multilingual Language	Eng, Spa, Fre, Ger, Ita
Dimension	Outline Dimension (with Rack)	480 x 220 x 61.1mm (18.90" x 8.66" x 2.41")
Cabinet	Cabinet Material	Electro-Galvanized Steel
Power	Electrical Ratings	DC 12V
Circumstance	Operating Temperature	0~40 Celsius
	Storage Temperature	-20~60 Celsius
Mounts	VESA Mount Size	75x75 mm
Options	Ceiling Mount	-
	Wall Mount	WB-5, 10, 30, 31
	Rack Mount	Tiltable Rack Mount

6. TROUBLESHOOTING

\* When the following troubles are occurred, follow the trouble shooting.  
Before contacting service center.

Troubleshooting	Troubleshooting Tip
The screen doesn't show up	1. Make sure if the power supply is connected property 2. Turn on the power. 3. Select the input signal right for the connected port.
The screen is too light or to dark	Control the BRIGHTNESS
The screen size is not fit for the PC signal	Press the AUTO key among keys in the front. (It is used only in the PC signal)
The screen color shows strange in the PC signal	In the FUNCTION menu of OSD menu, perform the AUTOADJUST.
The key pad does not work	Press ▲ and ◀ button on the key pad for 10 seconds.